

IG700

**User's Installation and
Configuration Manual**

Copyright © 2011

This manual is copyrighted, with all rights reserved. Under the copyright laws, this manual may not, in whole or in part, be copied, photocopied, reproduced, translated or converted to any electronic medium or machine readable form without prior written consent.

Limited Warranty

Under all circumstances this manual should be read attentively before installing and/or using the product. In no event shall be liable for any direct, indirect, special, consequential or incidental damages arising out of the use or inability to use this documentation or product, even if advised of the possibility of such damages. In particular, shall not be liable for any hardware, software, or data that is stored or used with the product, including the cost of repairing, replacing or recovering the above. Champtek reserves the right to change parts of the device at any time without preceding or direct announcement to the client. Champtek reserves the right to revise this manual, and to make changes in the contents without obligation to notify any person or entity of the revision or change. A serial number appears on the product. Make sure that this official registration number has not been removed. It should be provided whenever servicing by Champtek or an authorized Champtek dealer.

Notice: The manufacturer shall not be responsible neither for technical or editorial errors, nor for incidental or consequential damages due to the connection with the furnishing, performance, or usage of the publication.

DEC. 2011

Table of Contents

INTRODUCTION	1
CHAPTER 1 PRODUCT SAFETY	1
1.1 Safety & Caution.....	1
1.2 FCC Warning.....	3
1.3 Use of The IG-700	4
1.4 IG-700 Unpacking.....	5
1.5 Mounting	6
1.6 USB Interface	7
1.7 Configuration	7
1.7.1 Changing Scanner Settings with Programming Codes.....	7
1.7.2 Changing Scanner Settings with Utility Tool	8
CHAPTER 2 CONFIGURATION.....	9
2.1 USB Mode	9
2.2 RS232 Mode.....	10
2.3 Trigger Mode	11
2.4 Symbology Selection	12
2.5 Read Version	21
2.6 Language Keyboard Mapping	22
2.7 Prefix.....	23
2.8 Suffix.....	23
APPENDICES..	25
A. Readable Symbologies	25
B. Technical Specifications	25
C. Scan Map.....	27

Introduction

IG-700 is a cutting-edge gun-type barcode scanner which is designed specifically for retail market. We add on more user-friendly functions with detachable cable that makes it more easily to be operated by the customers.

The new IG-700 supports middle to long range operation. It is absolutely a high performance gun-type scanner. It provides the customer with the most efficient solution in the market. It is perfectly suitable and definitely the best choice for any retailers who use POS environment.

Compare with expensive products, IG-700 is with competitive price, higher quality and better performance. Due to the high MTBF of every component, a long operation time is secured.

The new scanner supports several interface types. These include RS232, USB HID and USB virtual com interfaces.

Chapter 1 Product Safety

1.1 SAFETY & CAUTION

1. Please read the following safety statement carefully.
2. Please preserve this user manual for reference.
3. Before cleaning the IG-700, the user must unplug all power. Do not use liquid or spray type of detergent to clean the scanner. Please use dampish cotton cloth to clean the *scanner*.
4. The power cord must be set nearby the *scanner* for easier power connection.
5. Keep the product dry to avoid short circuit.
6. During installation, the user must set the equipment at solid table to avoid damage caused by falling.
7. Before connecting to power, please ensure the voltage is pertaining to the equipment.
8. For safety issue, please tie wire well and do not put anything on the wire.
9. Please unplug the power after using the scanner. The over clocking usage of the product may result the decline of adapter life. Do not spray any liquid on this scanner because it may cause a fire or short circuit.
10. Do not spray any liquid on this scanner because it may cause a fire or short circuit.
11. If there are following situations, please contact the qualified technician to check this product.

- (a) The damage of wire or pin of power supply.
 - (b) The liquid infiltrates in the product.
 - (c) The exposure of the product in the wet environment.
 - (d) The equipment cannot work well.
 - (e) Any obvious damage that causes the scanner to fail working normally.
12. Do not storage the scanner in where the temperature lower than -20°C (-4°F) or higher than +70°C (158°F).

1.2 FCC WARNING

This product complies with the requirements in Part 15 of FCC.

Any operation must comply with the conditions below:

- (a) The equipment will not cause any severe interference.
- (b) The equipment can avoid any interference from environment.

Warning!



Statement:

This product is classified as an A class product.

This product may cause some interference with the environment surrounded; the user may have to do

something to avoid interference under this circumstance.


1.3 USE OF THE IG-700

IG-700 is very contemporarily designed and commonly applicable. It can be connected to POS or Host system through RS232 cable or USB cable.

To read a bar code, simply press the trigger button and aim the blue beam at the bar codes. It is required to position the beam vertically intersecting with the bar codes. The user will hear one beep, and the green LED will light on to confirm a successful scan.

The programming of the scanner is very easy. The user only needs to scan all necessary programming codes. The settings are directly saved permanently, and all settings can be disabled after scanning the factory default bar code.

Due to the powerful decoding processor, the IG-700 can decode almost all major 1D and 2D codes.

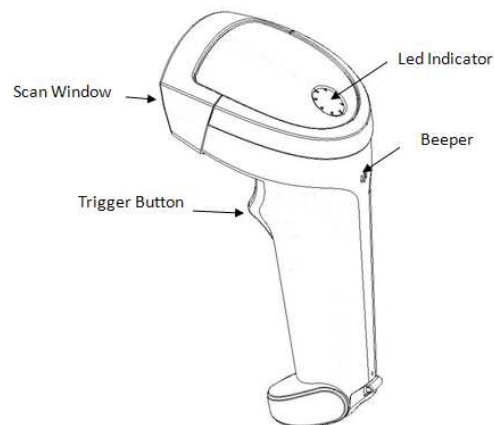

1.4 IG-700 UNPACKING

Unpack the IG-700 as follows:

1. Take the scanner and its accessories out of the box.
2. Remove the packing material.
3. Check the packing list to make sure you receive all of the items ordered.

Standard Shipment Package

- (a) IG-700 Area Imager Handheld Bar code Scanner
- (b) Communication Cable
- (c) Power Adaptor (optional)
- (d) User Manual

4. Check the IG-700 and accessories for any physical damage.

ATTENTION


The packing box should be used whenever the IG-700 is transported for service.

1.5 MOUNTING

The new IG-700 is designed for customer-installation. Once the user unpacks all components, he/she can start installing the scanner.

The following are the steps for installation:

1. Connect the scanner to the supplied interface cable (RJ45 side).
2. Connect the scanner interface cable to the POS system.
3. Connect the power supply cable (RS232 interface) to power cable jack.
4. Plug the power supply cable into the AC outlet.

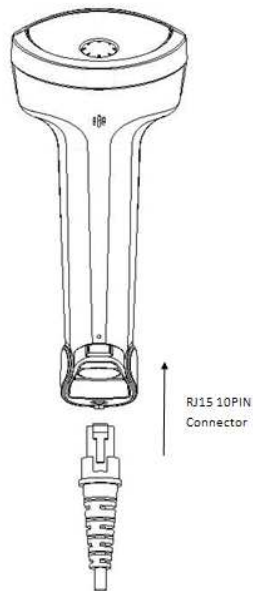

1.6 USB INTERFACE

Like all USB devices, the user must install the driver on the host system before connecting the IG-700 with USB virtual com interface.

Please contact Champtek Technical Support Department if the user needs the USB driver. The user can also download the USB driver from the web site listed below:

<http://www.champtek.com/>

1.7 CONFIGURATION

How to configure the IG-700:

The barcode programming features the possibility to change the scanner settings with the programming codes or with the utility tool.

1.7.1 Changing Scanner Settings with Programming Codes

The user can setup *scanner* by scanning all necessary programming codes for parameters that meet applications. The configuration change will take effect immediately and save to memory.

To go back to the factory default settings the user simply scans the factory default bar code.

1.7.2 Changing Scanner Settings with Utility Tool

Champtek provides this user manual with the most common used programming codes; it is possible that the user does not have enough programming codes to meet his/her desired operational settings.

This tool can be used with the following operation systems: Windows98, Windows2000, Windows XP and Windows Vista.







This utility tool can be delivered upon request. Please contact Champtek Technical Support Department. The USB driver can be downloaded from the Champtek web site listed below:

<http://www.champtek.com/>











Chapter 2 Configuration







The configuration change will take effect immediately and save to memory.

2.1 USB MODE





<div>USB Keyboard Mode</div> <div></div> <div>M0002_01</div> <div>A1</div>	<div>USB Downloader Mode</div> <div></div> <div>M0004_01</div> <div>A2</div>
<div>USB Virtual COM One Way Mode</div> <div></div> <div>M0005_01</div> <div>A3</div>	<div>USB Native Two Way Mode</div> <div></div> <div>M0006_01</div> <div>A4</div>
<div>USB HID POS (Terminal ID 131)</div> <div></div> <div>M0003_01</div> <div>A5</div>	<div>Reset to USB Factory Defaults</div> <div></div> <div>M0001_01</div> <div>A6</div>

2.2 RS232 MODE











<div>RS-232 Raw Mode</div> <div></div> <div>M0149_01</div> <div>B1</div>	<div>RS-232 Packet Mode</div> <div></div> <div>M0150_01</div> <div>B2</div>
<div>Reset to RS-232 Factory Defaults</div> <div></div> <div>M0017_01</div> <div>B3</div>	<div>RS-232 Interface 7 Data Bits</div> <div></div> <div>M0018_01</div> <div>B4</div>
<div>RS-232 Interface 8 Data Bits - Default</div> <div></div> <div>M0019_01</div> <div>B5</div>	<div>RS-232 Interface 1200 Baud Rate</div> <div></div> <div>M0020_01</div> <div>B6</div>
<div>RS-232 Interface 2400 Baud Rate</div> <div></div> <div>M0021_01</div> <div>B7</div>	<div>RS-232 Interface 4800 Baud Rate</div> <div></div> <div>M0022_01</div> <div>B8</div>
<div>RS-232 Interface 9600 Baud Rate</div> <div></div> <div>M0023_01</div> <div>B9</div>	<div>RS-232 Interface 19200 Baud Rate</div> <div></div> <div>M0024_01</div> <div>B10</div>










<p>RS-232 Interface 38400 Baud Rate</p>  <p>M0025_01</p> <p>B11</p>	<p>RS-232 Interface 57600 Baud Rate</p>  <p>M0026_01</p> <p>B12</p>
<p>RS-232 Interface 115200 Baud Rate - Default</p>  <p>M0027_01</p> <p>B13</p>	<p>RS-232 Interface Even Parity</p>  <p>M0028_01</p> <p>B14</p>
<p>RS-232 Interface Odd Parity</p>  <p>M0029_01</p> <p>B15</p>	<p>RS-232 Interface No Parity - Default</p>  <p>M0030_01</p> <p>B16</p>










2.3 TRIGGER MODE


<p>Continuous Scan Both Imagers</p>  <p>M0127_01</p> <p>C1</p>	<p>Continuous Scan Off - Default</p>  <p>M0126_01</p> <p>C2</p>
<p>Motion Detection Scanning On</p>  <p>M0128_05</p> <p>C3</p>	<p>Motion Detection Scanning Off</p>  <p>M0129_01</p> <p>C4</p>











2.4 SYMBOLOGY SELECTION










<p>Aztec On - Default</p>  <p>M0033_01</p> <p>D1</p>	<p>Aztec Off</p>  <p>M0034_01</p> <p>D2</p>
<p>Aztec Inverse On</p>  <p>M0035_01</p> <p>D3</p>	<p>Aztec Inverse & Normal</p>  <p>M0036_01</p> <p>D4</p>
<p>Codabar On - Default</p>  <p>M0037_01</p> <p>D5</p>	<p>Codabar Off</p>  <p>M0038_01</p> <p>D6</p>
<p>Codablock F On</p>  <p>M0039_01</p> <p>D7</p>	<p>Codablock F Off - Default</p>  <p>M0040_01</p> <p>D8</p>
<p>Code 11 On</p>  <p>M0042_01</p> <p>D9</p>	<p>Code 11 Off - Default</p>  <p>M0041_01</p> <p>D10</p>











<p>Code 11 - Checksum 1 digit</p>  <p>M0043_01</p> <p>D11</p>	<p>Code 11 - Checksum 2 digit & Strip from Result</p>  <p>M0044_01</p> <p>D12</p>
<p>Code 11 - Checksum 1 digit & Strip from Result</p>  <p>M0045_01</p> <p>D13</p>	
<p>Code 39 On - Default</p>  <p>M0046_01</p> <p>D15</p>	<p>Code 39 Off</p>  <p>M0047_01</p> <p>D16</p>
<p>Code 39 Enable Checksum</p>  <p>M0048_01</p> <p>D17</p>	<p>Code 39 Disable Checksum - Default</p>  <p>M0049_01</p> <p>D18</p>
<p>Code 39 Enable Checksum and Strip</p>  <p>M0050_01</p> <p>D19</p>	<p>Code 39 Extended Full ASCII On</p>  <p>M0051_01</p> <p>D20</p>










<p>Code 39 Extended Full ASCII Off - Default</p>  <p>M0052_01</p> <p>D21</p>	<p>Code 39 Short Margin On - Default</p>  <p>M0053_01</p> <p>D22</p>
<p>Code 39 Short Margin Off</p>  <p>M0054_01</p> <p>D23</p>	<p>Code 39 Trioptic On</p>  <p>M0056_01</p> <p>D24</p>
<p>Code 39 Trioptic Off</p>  <p>M0055_01</p> <p>D25</p>	
<p>Code 93 On - Default</p>  <p>M0059_01</p> <p>D26</p>	<p>Code 93 Off</p>  <p>M0060_01</p> <p>D27</p>
<p>Code 128 On - Default</p>  <p>M0061_01</p> <p>D28</p>	<p>Code 128 Off</p>  <p>M0062_01</p> <p>D29</p>

<p>Code 128 Short Margin On - Default</p>  <p>M0063_01</p> <p>D30</p>	<p>Code 128 Short Margin Off</p>  <p>M0064_01</p> <p>D31</p>
<p>Composite On</p>  <p>M0065_01</p> <p>D32</p>	<p>Composite Off - Default</p>  <p>M0066_01</p> <p>D33</p>
<p>Data Matrix Rectangle On</p>  <p>M0067_01</p> <p>D34</p>	<p>Data Matrix Rectangle Off - Default</p>  <p>M0068_01</p> <p>D35</p>
<p>Data Matrix Inverse On</p>  <p>M0069_01</p> <p>D36</p>	<p>Data Matrix Inverse Off - Default</p>  <p>M0070_01</p> <p>D37</p>
<p>Enable improved reading capability for hard to decode Data Matrix symbols</p>  <p>M0071_01</p> <p>D38</p>	<p>Disable improved reading capability for hard to decode Data Matrix symbols - Default</p>  <p>M0072_01</p> <p>D39</p>







<p>GS1 DataBar Limited On</p>  <p>M0112_01</p> <p>D40</p>	<p>GS1 DataBar 14/ Truncated 14 On</p>  <p>M0113_01</p> <p>D41</p>
<p>GS1 DataBar 14 Stacked On</p>  <p>M0114_01</p> <p>D42</p>	<p>GS1 DataBar Expanded On</p>  <p>M0115_01</p> <p>D43</p>
<p>All GS1 DataBar On - Default</p>  <p>M0116_01</p> <p>D44</p>	<p>All GS1 DataBar Off</p>  <p>M0117_01</p> <p>D45</p>
<p>Int 2 of 5 On - Default</p>  <p>M0073_01</p> <p>D46</p>	<p>Int 2 of 5 Off</p>  <p>M0074_01</p> <p>D47</p>
<p>Int 2 of 5 2 Digits On</p>  <p>M0075_01</p> <p>D48</p>	<p>Int 2 of 5 2 Digits Off - Default</p>  <p>M0076_01</p> <p>D49</p>

<p>Int 2 of 5 4 Digits On</p>  <p>M0077_01</p> <p>D50</p>	<p>Int 2 of 5 4 Digits Off</p>  <p>M0078_01</p> <p>D51</p>
<p>Int 2 of 5 with Control Character Stripped</p>  <p>M0151_01</p> <p>D52</p>	
<p>Maxicode On</p>  <p>M0079_01</p> <p>D53</p>	<p>Maxicode Off - Default</p>  <p>M0080_01</p> <p>D54</p>
<p>Matrix 2 of 5 On</p>  <p>M0081_01</p> <p>D55</p>	<p>Matrix 2 of 5 Off Default</p>  <p>M0082_01</p> <p>D56</p>
<p>Micro PDF417 On</p>  <p>M0083_01</p> <p>D57</p>	<p>Micro PDF417 Off - Default</p>  <p>M0084_01</p> <p>D58</p>


<p>MSI Plessy On - Default</p>  <p>M0085_01</p> <p>D59</p>	<p>MSI Plessy Off</p>  <p>M0086_01</p> <p>D60</p>
<p>Macro PDF 417 On</p>  <p>M0093_01</p> <p>D61</p>	<p>Macro PDF 417 Off - Default</p>  <p>M0094_01</p> <p>D62</p>
<p>NEC 2 of 5 On - Default</p>  <p>M0087_01</p> <p>D63</p>	<p>NEC 2 of 5 Off</p>  <p>M0088_01</p> <p>D64</p>
<p>Disable OCR - Default</p>  <p>M0089_01</p> <p>D65</p>	<p>Enable OCR</p>  <p>M0090_01</p> <p>D66</p>
<p>PDF 417 On - Default</p>  <p>M0091_01</p> <p>D67</p>	<p>PDF 417 Off</p>  <p>M0092_01</p> <p>D68</p>

Postal Codes Australian Post On  M0095_01 D69	Postal Codes Japan Post On  M0096_01 D70
Postal Codes KIX On  M0097_02 D71	Postal Codes Postnet On  M0099_01 D72
Postal Codes Planet On  M0098_01 D73	Postal Codes Planet & Postnet On  M0100_01 D74
Postal Codes Royal Mail On  M0101_01 D75	4-State CB On (Intelligent Mail)  M0103_01 D76
Postal Codes All Postal Codes Off - Default  M0102_01 D77	










<p>QR Code On</p>  <p>M0104_01</p> <p>D78</p>	<p>QR Code Off - Default</p>  <p>M0105_01</p> <p>D79</p>
<p>QR Code Enable Checksum</p>  <p>M0106_01</p> <p>D80</p>	<p>QR Code Disable Checksum</p>  <p>M0107_01</p> <p>D81</p>
<p>QR Code Inverse and Standard On</p>  <p>M0109_01</p> <p>D82</p>	<p>QR Code Inverse On</p>  <p>M0108_01</p> <p>D83</p>
<p>Enable All QR Code On (includes Micro QR)</p>  <p>M0110_01</p> <p>D84</p>	<p>Inverse and Micro QR Code On</p>  <p>M0111_01</p> <p>D85</p>
<p>Telepen On - Default</p>  <p>M0118_01</p> <p>D86</p>	<p>Telepen Off</p>  <p>M0119_01</p> <p>D87</p>

<p>UPC On - Default</p>  <p>M0120_01</p> <p>D88</p>	<p>UPC Off</p>  <p>M0121_01</p> <p>D89</p>
<p>UPC Short Margin Enabled - Default</p>  <p>M0122_01</p> <p>D90</p>	<p>UPC Short Margin Disabled</p>  <p>M0123_01</p> <p>D91</p>
<p>UPC Extension On - Default</p>  <p>M0124_01</p> <p>D92</p>	<p>UPC Extension Off</p>  <p>M0125_01</p> <p>D93</p>







2.5 READ VERSION

<p>Reader ID and Firmware Version</p>  <p>M0148_01</p> <p>E1</p>





2.6 LANGUAGE KEYBOARD MAPPING







<div>US English Keyboard Mapping - Default No Leading 0</div> <div> M0008_01</div> <div>F1</div>	<div>US English Keyboard Mapping - Leading 0</div> <div> M0007_01</div> <div>F2</div>
<div>French Keyboard</div> <div> M0010_01</div> <div>F3</div>	<div>German Keyboard</div> <div> M0011_01</div> <div>F4</div>
<div>Japanese Keyboard</div> <div> M0012_01</div> <div>F5</div>	<div>Control Characters for Non Printable ASCII</div> <div> M0009_01</div> <div>F6</div>
<div>Universal Keyboard Mapping</div> <div> M0013_01</div> <div>F7</div>	<div>Enable Alternative OS (Windows CE/MAC/Unix/Linux)</div> <div> M0015_01</div> <div>F8</div>
<div>Disable Alternative OS</div> <div> M0016_01</div> <div>F9</div>	

2.7 PREFIX

<div>Prefix - Comma</div> <div></div> <div>M0130_01</div> <div>G1</div>	<div>Prefix - Space</div> <div></div> <div>M0131_01</div> <div>G2</div>
<div>Prefix - Tab (USB Keyboard Mode ONLY)</div> <div></div> <div>M0132_01</div> <div>G3</div>	<div>Prefix - Tab (RS-232 Mode ONLY)</div> <div></div> <div>M0133_01</div> <div>G4</div>
<div>Prefix - Erase/None - Default</div> <div></div> <div>M0134_01</div> <div>G5</div>	<div>Prefix - CRLF</div> <div></div> <div>M0135_01</div> <div>G6</div>

2.8 SUFFIX

<div>Suffix - Carriage Return</div> <div></div> <div>M0136_01</div> <div>H1</div>	<div>Suffix - Comma</div> <div></div> <div>M0137_01</div> <div>H2</div>
<div>Suffix - Line Feed</div> <div></div> <div>M0138_01</div> <div>H3</div>	<div>Suffix - Carriage Return Line Feed</div> <div></div> <div>M0139_01</div> <div>H4</div>

<p>Suffix - Tab (USB Keyboard Mode ONLY)</p>  <p>M0142_01</p> <p>H5</p>	<p>Suffix - Tab (RS-232 Mode ONLY)</p>  <p>M0143_01</p> <p>H6</p>
<p>Suffix - Erase/None - Default</p>  <p>M0144_01</p> <p>H7</p>	<p>Erase Prefix & Suffix Data</p>  <p>M0145_01</p> <p>H8</p>
<p>Reader Text Commands On</p>  <p>M0146_01</p> <p>H9</p>	<p>Reader Text Commands Off - Default</p>  <p>M0147_01</p> <p>H10</p>

Appendices

A.READABLE SYMBOLOGIES

Symbologies	Default Enable
Aztec	V
Codabar	V
Codablock	
Code 11	
Code 39	V
Code 93	V
Code 128	V
Composite	
DataMatrix	
GS1 DataBar (RSS)	V
Interleaved 2 of 5	V
Matrix 2 of 5	
MaxiCode	
Marco PDF417	
Micro PDF417	
MSI Plessey	V
NEC2 of 5	V
PDF417	V
Post Codes(Australian, Japan, KIX, Postnet, Planet, Royal)	
QR Code	
Telepen	V
UPC/EAN	V

B.TECHNICAL SPECIFICATIONS

Physical Characteristics

Body Weight	Approx. 150 gm
Material	ABS Plastic
Connector	RJ45C 10Pins
Dimension	82.85(L)x 75(W) x 171.3(H)mm

Operational

Light Source	Visible Red Light 650nm + 20nm
Resolution	1280 Horizontal x 960 Vertical Pixels, 256 Gray Levels.
Scan Angle	30° Horizontal, 20° Vertical on high density field 50° Horizontal, 33.5° Vertical on wide field
Pitch	±60° (from front to back)
Skew	±60° (from plane parallel to symbol (side- to-side))
Rotational Tolerance	±180°
Interface	RS-232, USB (HID KBW or Virtual Comport)
Indicators	Green = good read

Electrical Characteristics

Operation Voltage	5 VDC ±5%
Operating Current	450 mA (max) @ 5 VDC
Standby Current	37 mA typical @ 5 VDC
AC Adaptor	5.2 VDC @ 650 mA / Input AC 100-240V

Environmental

Operating Temp.	0°C to 50°C (32°F to 122°F)
Storage Temp.	-20°C to 70°C (-4°F to 158°F)
Relative Humidity	0 to 95% non-condensing
Ambient Light	Work in lighting conditions from 0 to 100,000 lux

Regulatory of Compliance

FCC

CE

C.SCAN MAP

Typical Reading Range (Centimeters)

Symbology	Density	Minimum Distance	Maximum Distance
		Inches(mm)	Inches(mm)
Code 39	3mil	3.9"(100)	4.7"(120)
	7.5mil	2.0"(50)	8.0"(205)
UPC	13mil	2.0"(50)	10.8"(275)
Data Matrix	4.2mil	3.7"(9.5)	4.7"(120)
	5mil	3.7"(9.5)	5.5"(140)
	6.3mil	3.3"(85)	6.3"(160)
	10mil	1.6"(40)	7.9"(200)
	20.8mil	1.6"(40)	12.2"(310)

V00
0145-IG00011

